


Grip Strut Steps

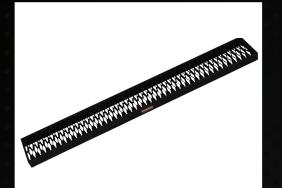

Grip Strut Steps





Owens Products, Inc. 1107 Progress St. Sturgis, MI 49091

Owens Commercial™ Grip Strut Steps



- Commercial Grade Grip Strut Aluminum
- Textured Black Powder Coat
- Provides an Aggressive Sure-foot Area for Secure Stepping
- Welded End Caps Add Strength and Nice Finished Look
- Great for Vehicles with Large Fender Flares
- Perfect for Fleet, Construction and Municipal Jobs
- Custom Brackets for Superior Strength and Easy Installation

Owens Commercial™ Grip Strut Steps. These Commercial Grip Strut Steps for heavy use are manufactured from commercial grade grip strut aluminum and are powder coated to prevent rust and corrosion. End caps are welded on both ends to add strength and give it a nice

finished look. The end caps are also great for vehicles with large fender flares or other obstructions in the wheel wells. The grip strut design on these aluminum steps provides an aggressive sure-foot area for secure stepping all year round. These steps feature easy-to-install body mount brackets for most applications. All applications have been tested to withstand up to 600 lbs and perform day after day on the job.







Phone: 800-726-9367 Fax: 800-942-9877 www.owensproducts.com sales@owensproducts.com Proudly Made in the USA!!!

800-726-9367

www.owensproducts.com



Grip Strut Steps

Owens Commercial™ Grip Strut

Part Numbers ending with "-01" means a bracket kit must be ordered separately.

				PART REQUIRED			
YEARS	TYPE	DESCRIPTION	LENGTH	NUMBER	REQUIRED BRACKET KIT		
CHEVROLE	Т						
Silverado	1500						
19-19	Cab Length	Double Cab	80"	82374	Included		
19-19	Cab Length	Crew Cab	90"	82373	Included		
CHEVROLE	T/GMC						
Silverado	/Sierra 1500						
14-18	Cab Length	Regular Cab	57"	82350	Included		
14-18	Cab Length	Double Cab	80"	82351	Included		
14-18	Cab Length	Crew Cab	90"	82352	Included		
Silverado	/Sierra 2500 3500) - Gas Only					
15-18	Cab Length	Regular Cab	57"	82350	Included		
15-19	Cab Length	Double Cab	80"	82351	Included		
15-19	Cab Length	Crew Cab	90"	82352	Included		
Express/S	avana Vans						
97-19	Rear Step	Express/Savana Van	65"	82369	Included		
FORD							
F-150							
15-19	Cab Length	Regular Cab	54"	82347	Included		
15-19	Cab Length	Super Cab	80"	82359	Included		
15-19	Cab Length	SuperCrew Cab	90"	82349	Included		
04-14	Cab Length	Regular Cab	57"	82356	Included		
04-14	Cab Length	Super Cab	80"	82357	Included		
04-14	Cab Length	SuperCrew Cab	90"	82358	Included		
F-250 F-3	50 F-450 F-550 - v	vith or without Flares					
17-19	Cab Length	Regular Cab	54"	82347	Included		
17-19	Cab Length	Super Cab	80"	82348	Included		
17-19	Cab Length	Crew Cab	90"	82349	Included		



Grip Strut Steps



Owens Commercial™ Grip Strut

Part Numbers ending with "-01" means a bracket kit must be ordered separately.

YEARS	TYPE	DESCRIPTION		LENGTH	PART NUMBER	REQUIRED BRACKET KIT
FORD	111 &	DESCRIPTION		LENGTH	HOTIDER	DICHERET KIT
	50/250 - 130" Wh	eel Base				
15-19	Long/Long	Transit - 2" Drop		90"	82362-01	10-1362
15-19	Short/Long	Transit - 2" Drop		34"/90"	82363	Included
15-19	Rear Step	Transit		65"	82343	Included
Transit 15	0/250/350 - 148'	" Wheel Base - SRW = Single Rear Wheel DRW = Dual Rear \		ually)		
15-19	Long/Long	Transit - 2" Drop - Single Slider Door - SRW/DRW		114.5"	82360-01	10-1358
15-19	Short/Long	Transit - 2" Drop - SRW/DRW	盘	34"/114.5"	82361-01	10-1357
15-19	Rear Step	Transit		65"	82343	Included
MERCEDES	-BENZ					
07-19	Short/Long	Sprinter Van 170" Wheel Base	<u> </u>	34"/124"	823661379	Included
NISSAN						
12-19	Rear Step	NV Full Size Van		48"	82341	Included
RAM						
1500						
19-19	Cab Length	Quad Cab		80"	82371	Included
19-19	Cab Length	Crew Cab		90"	82370	Included
13-18	Cab Length	Quad Cab		80"	82354	Included
		ith or without Flares (Includes Chassis Cab)				
13-19	Cab Length	Regular Cab		54"	82353	Included
13-19	Cab Length	Crew Cab		90"	82355	Included
	r Full Size Van					
14-19	Short/Long	ProMaster - 159" Wheel Base		34"/123"	823671380	Included
14-19	Rear Step	ProMaster - 118", 136" & 159" Wheel Base		65"	82342	Included

