Owens' Premier™

OWENS Products, Inc.

October 15, 2002

Installation Guide	*Dodge Ram*	*Product No.*
2002 to Current (New Body Style)		***Standard Cab 67007*** ***Quad/Crew Cab 67008***

Note: Drilling into body is required.

Installation Parts List:

Note: Not all screws are required for these installations

	Std. Qty.	Quad Qty.	Description		Std. Qty.	Quad Qty.	Description
A	2	2	Running Boards	E	4	6	Step Supports #3124F
B	2	2	Foam Tape Strips	F	16	24	5/16" x 3/4" Washer Head Bolts
C	4	4	Step Pads	G	16	24	5/16" Washer Head Nuts
D	4	6	Flat Plates #FL43	H	12	6	#14 x 3/4" Self-Drilling Screws
E	4	6	Angled Straps #AS01				

Tools Required: 5/16" Drill • 1/2" Hex Socket • 1/2" Wrench • 3/8" Nut Driver

1. **Prior to painting, fit your Owens' Premier running boards to the body.** A good fit is accomplished when mating surfaces fit with minimum light gaps. Note: Vehicle bodies have variations and a perfect fit may not be possible.
2. **Painting your Owens' Premier running boards.** To insure a proper paint finish, use a top quality auto paint system and follow the manufacturers instructions for painting ABS plastic.

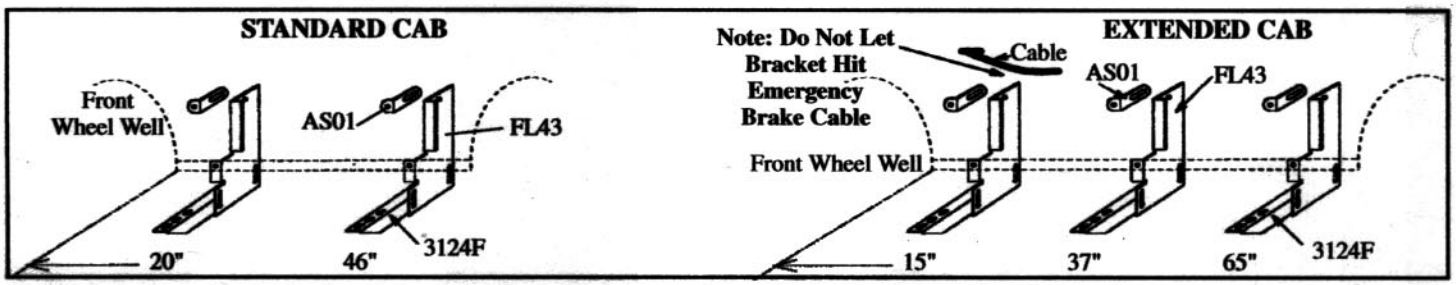

3. **Measure** from front wheel well, back to dimensions shown above. Mark these bracket location centers.

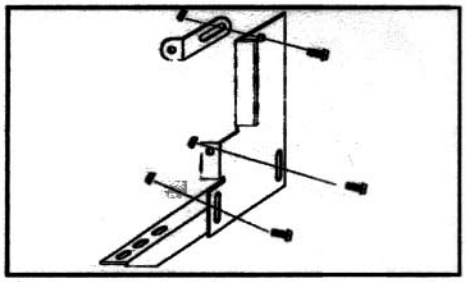

4. Assemble bracket components with 5/16" nuts & bolts as shown. **Do not tighten at this time.**

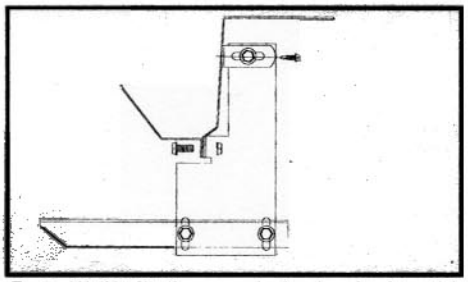

5. Drill 5/16" diameter holes in pinch weld at marks. Bolt brackets FL43 to pinch weld using 5/16" bolts and nuts, then secure to inner rocker panel using #14 x 3/4" self-drilling screws through AS01.

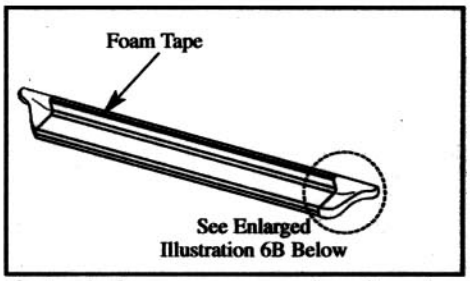

6. Apply foam tape to top edge of running board. Remove protective strip from top edge of foam tape.

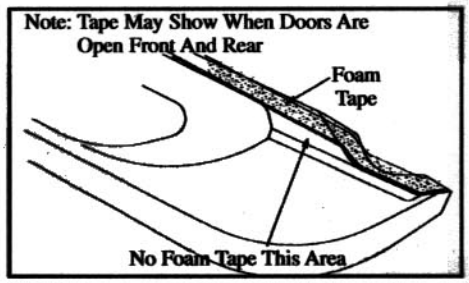

6B. Shown above is a detailed version of running board end.

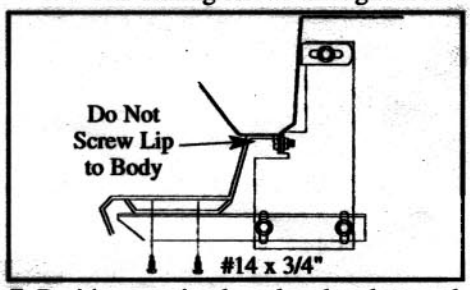

7. Position running board on brackets and tight to truck body. Screw board to bracket using two #14 x 3/4" self-drilling screws per bracket. **Tighten all** bolts to 18 foot pounds.

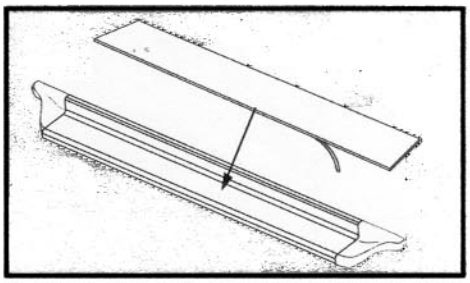

8. Place step pad on running board. Peel off tape backing to secure. ***Don't forget the Owens label!***

IN-203 10/15/02

Owens Products • 1000 Progress Street • Sturgis, MI 49091 • 616-651-2300 • Toll-Free: 800-726-9367 • Fax: 616-651-9326 • Web: www.owens-pro.com