


Hardware included shown on right.
No Drilling into Truck Bed

Tools required:

- 1/2" socket
- Drill
- 5/16" Drill bit

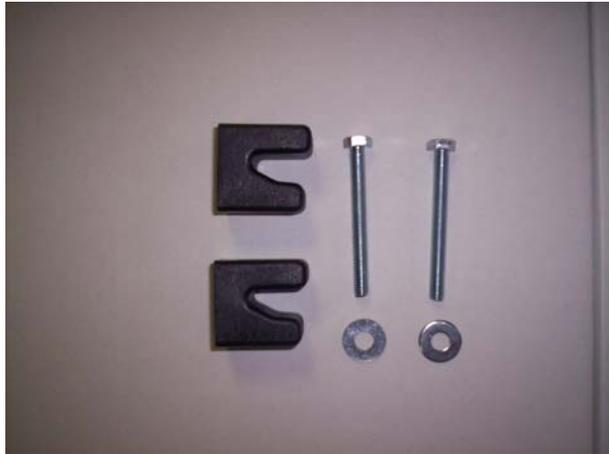


Start by placing the foam tape, on the bed rails where you are placing your tool box.



Center tool box and make a mark on bottom of tool box 1/4" from bed rail (on both sides). Remove box and drill a 5/16" hole.



Insert 5/16" bolt and washer from inside of tool box through drilled hole.

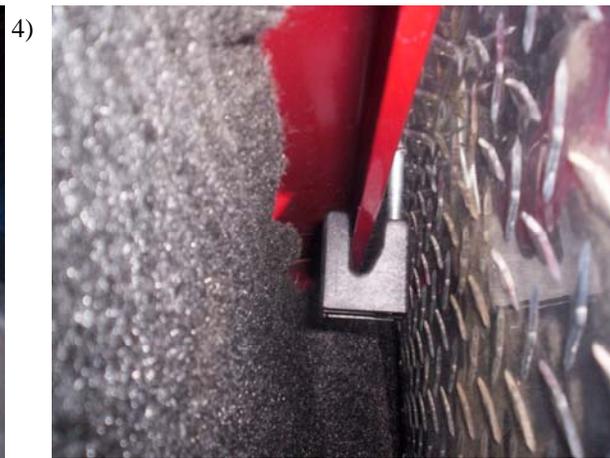

Attach plastic U-clamp to 5/16" bolt and tighten.