



EXISTING BOLTS AT REAR
OF WHEEL WELL

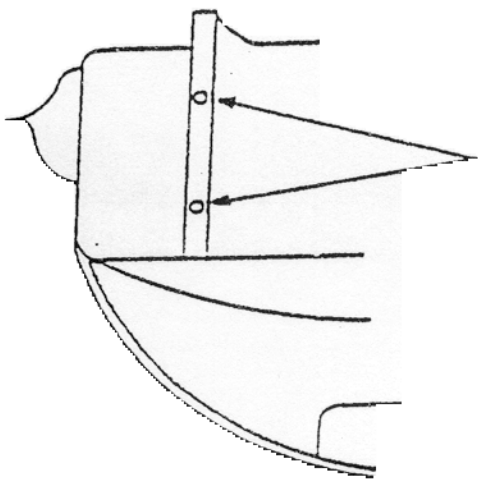

1973-1987 CHEV. DUALY
[W/OLD BODY STYLE]

INS-CDMFO

1 X 6 FORMED ANGLE
(ATTACH TO REAR OF WHEEL WELL
USING EXISTING BOLTS)

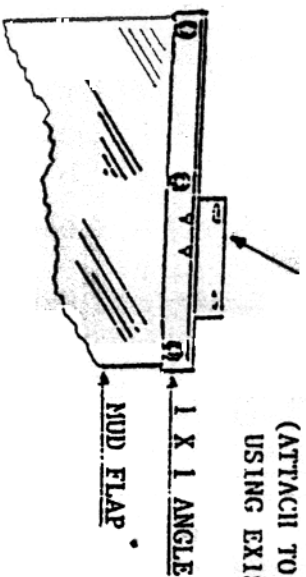

REMOVE EXISTING (TWO) BOLTS
LOCATED AT REAR OF WHEEL
WHEEL AND ALIGN THE SLOTS IN
THE 1 X 6 FORMED ANGLE AND REBOLT

ATTACH MUD FLAP TO 1 X 1 X 20"
ANGLE WITH FASTENERS PROVIDED.
(5/16" BOLTS, NUT, SPLIT LOCKWASHERS
AND 3/8" FLAT WASHERS)

ATTACH MUD FLAP ASSEMBLY
TO 1 X 6 FORMED PREVIOUSLY
INSTALLED WITH TWO 5/16" BOLTS,
NUTS AND WASHERS

