

Tools Required

- 13 mm Socket
- 10 mm Socket
- 8 mm Socket
- T45 Bit
- Drill with Phillips Bit
- Diagonal Pliers

Step 1


Remove factory hood from Jeep.

- Unplug windshield fluid lines.
- Remove ground wire and reapply ground wire to a convenient ground location in engine bay.
- Remove the hood latch points at front of factory hood (**Keep all hardware**)
- Close the hood.
- Remove the hood bolts using T45 bit.
- With a friend, remove the factory hood.
(Can be heavy and large in size for one person to lift off)

Step 2

Test fit your Venom Hood before painting

- Line up the hood hinges.
- Test fit the latch points at front corners.

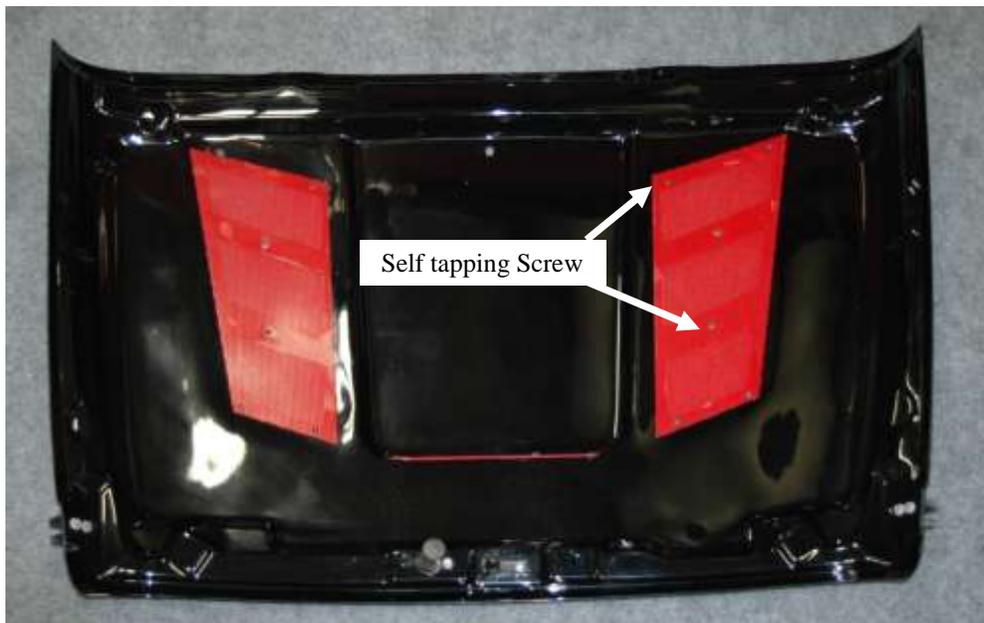

Step 3


After your hood/vents covers are painted

- Using the self-tapping screws in the package; line up the screens over the vent openings with equal spacing all around. Screw in 6 screws (One on each corner, one in the middle of the two ribs for each side)
- For the front vent: Line up the vent cover and put one self-tapping screw on each side.
(There is aluminum bracing inside the hood for the screws to go into)

Step 4

Apply factory windshield fluid nozzle

- If you have a 2013 or newer Wrangler, simply plug off one hose and tuck it down.
- With the remaining nozzle trim the front clip as shown in the picture little by little as needed for a snug fit when clicking it into place on the hood.
- Attach remaining fluid hose to the nozzle.

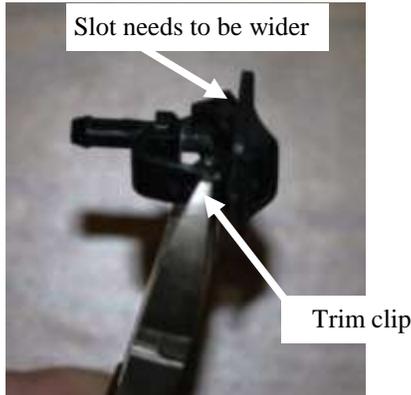

On the windshield washer sprayer using a set of diagonal wire cutting pliers trim the clip on underside at the point it gets wider at the end. The slot on opposite side needs to be wider this can be done with a saw and utility knife. Snap into fiberglass hood if it doesn't snap into hood securely additional trimming maybe necessary do to the fiberglass thickness between the inner and outer of hood may vary a little.

Step 5


Safety latch and spring assembly

- Locate the front of your Venom hood and attach the factory latch and spring in the provided holes as shown in picture.

Step 6

Attach the outer hood tie down latch points

- Locate the front corner holes of your Venom hood and attach the factory tie down latch points as shown in picture.

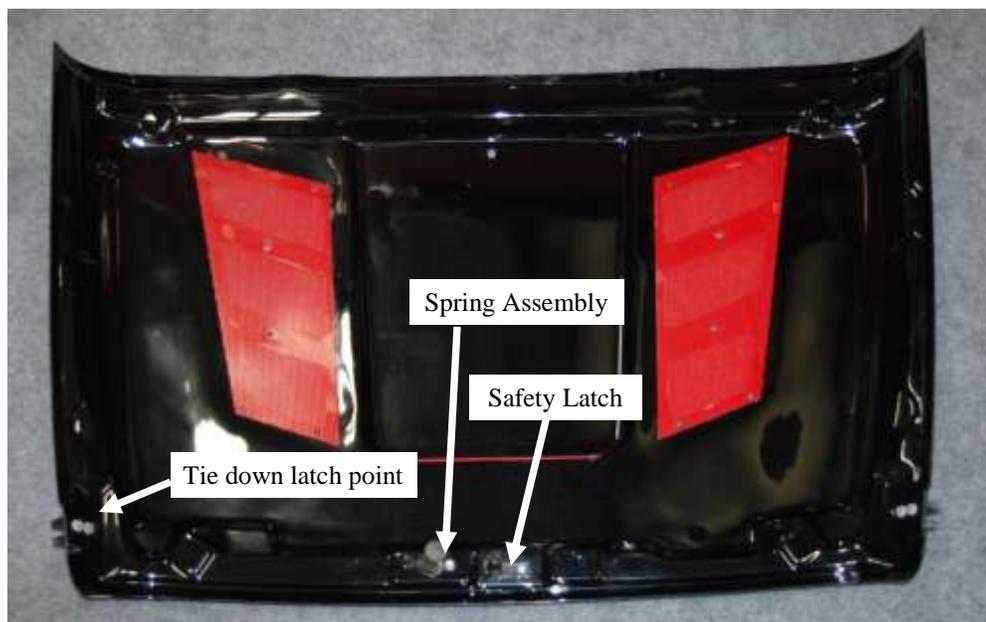

Step 7

Attach the hood on vehicle

- With the help of a friend place the hood onto the Jeep and bolt the hinge to the hood with the bolts removed from the original factory hood.

