




Hardware included shown on right.

NO DRILLING INTO VEHICLE IS REQUIRED!

Tools required:

- 1/2" socket
- 1/2" wrench
- 3/8" Nut driver on Drill
- Tape measure

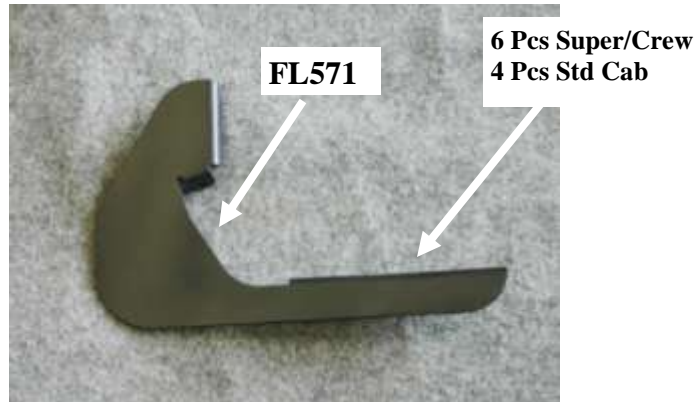

1)



Measure from front wheel well back
Std Cab— 16" & 48"
Super Cab—17", 33 1/2", 64"
Super Crew Cab—17", 47", 70"

2)



Pull the tape that covers large hole in rear of rocker panel. Slide a spring clip into hole until it snaps into the other hole.



Owens Grip Strut
IN639

2011 – 14 Ford F150
All Cabs

3)



Attach brackets to vehicle by inserting a 5/16" x 3/4" bolt into the spring clip and 5/16" x 3/4" bolt and nut through the pinch weld hole.

4)



Place the board on the brackets and align up on the vehicle. Attach to the brackets using #14 X 3/4" long self drilling screws.