


**Tools required:**

- Ratchet
- 13mm Socket
- 13mm Wrench
- 7/16" Socket
- 3/8" Nut driver on Drill
- Tape measure

**NO DRILLING INTO VEHICLE IS REQUIRED!**

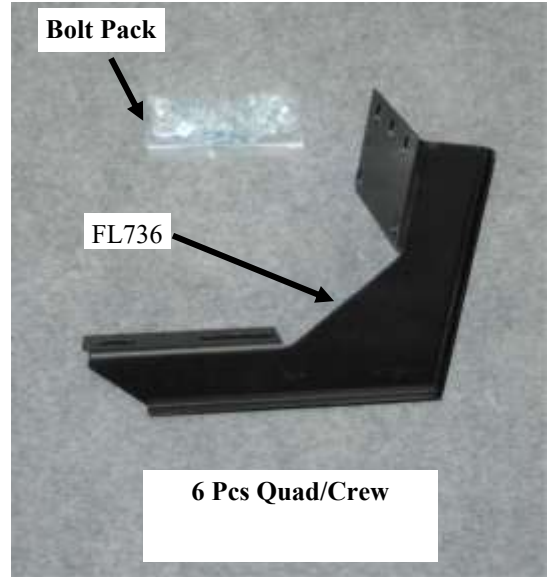


**NOTE CREW CAB SHOWN IN PHOTOS!**



Measure from front wheel well back and :

Quad Cab—15 1/4", 43 3/8", 64 3/4"  
 Crew Cab—15 1/4", 43 3/8", 73 3/8"

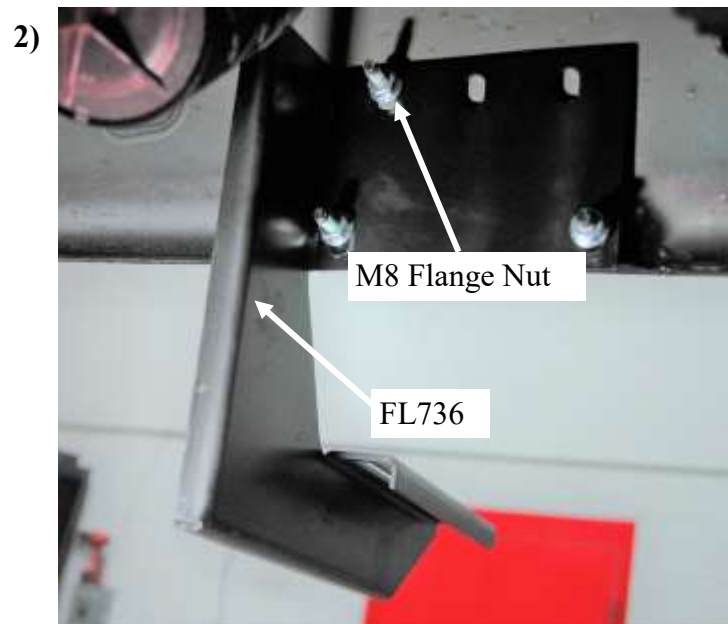


Place the FL736 bracket onto the stud coming out from the back of the rocker panel, for each location. Put (3) M8 nuts onto each stud and snug up bracket to the rocker Leaving loose for adjustment

3)



Remove the small factory stone guard in the front fender well by removing the small screw and then unsnap. Keep screws to reinstall the screws.

4)

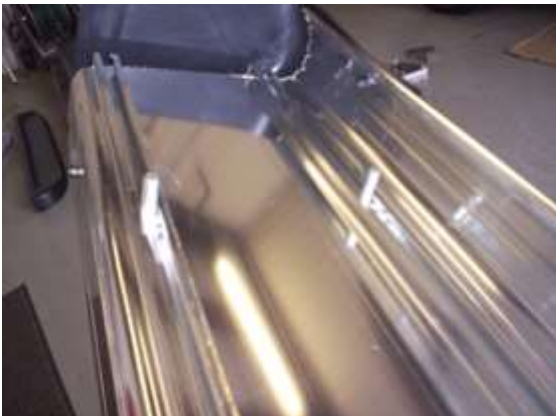

Insert one square head bolt into front & rear track for each bracket.

5)




Attach the stone guard and end caps to the board with 3/8" self threading bolts. (extruded board shown)

- 6) Place the board on the brackets with bolts through slots. Attach with 1/4" nuts loose.



7)

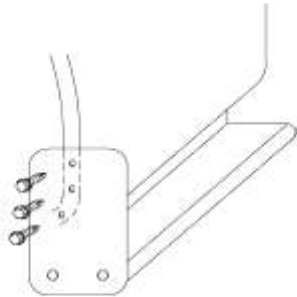

Level board and attach stone guard to vehicle using the sheet metal screws that are included or drill holes in the stone guard in the locations of the screws removed from the OEM plastic stone guard.

**Level the board and tighten all bolts. Repeat steps for the opposite side.**

